

Headlamp Assembly




Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: If the headlamp assembly is being replaced, the light emitting diode (LED) control module needs to be transferred to the new headlamp assembly.

All vehicles


1. Remove the radiator grille.
Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the upper headlamp bolts and the push pin.
Torque: 36 lb.in (4.1 Nm)

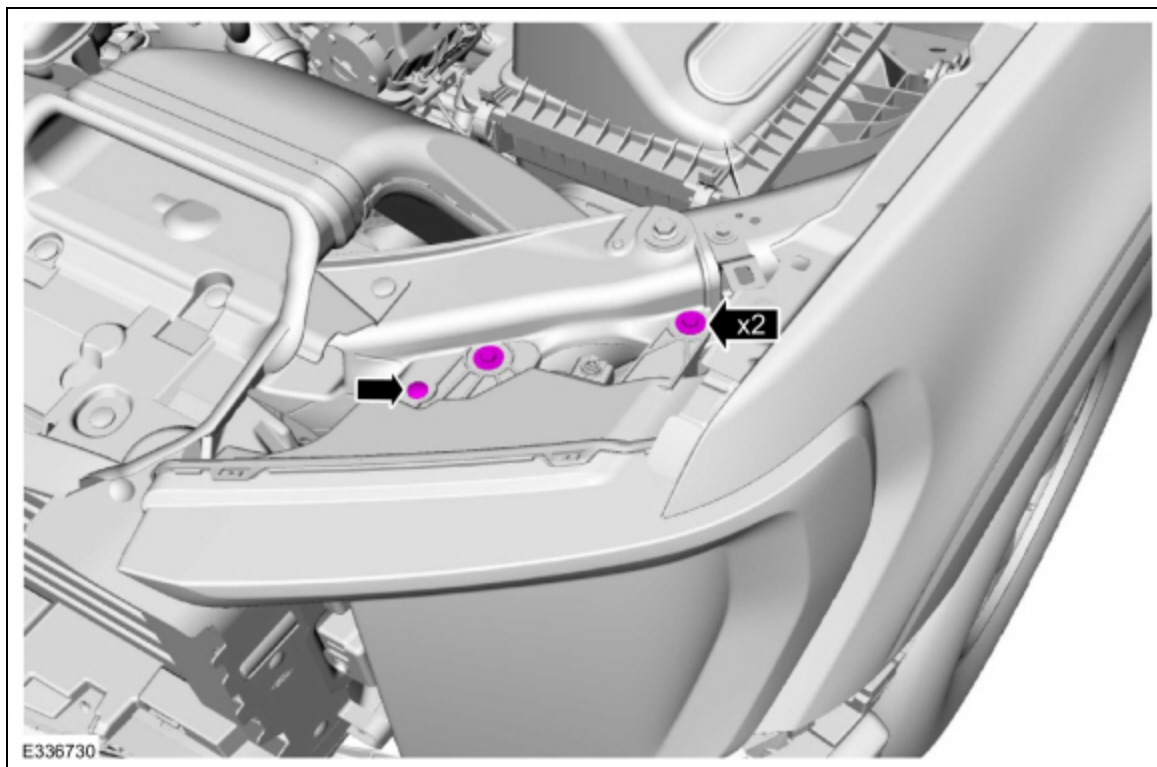

3. Remove the bolts and position out the front bumper cover mounting bracket.

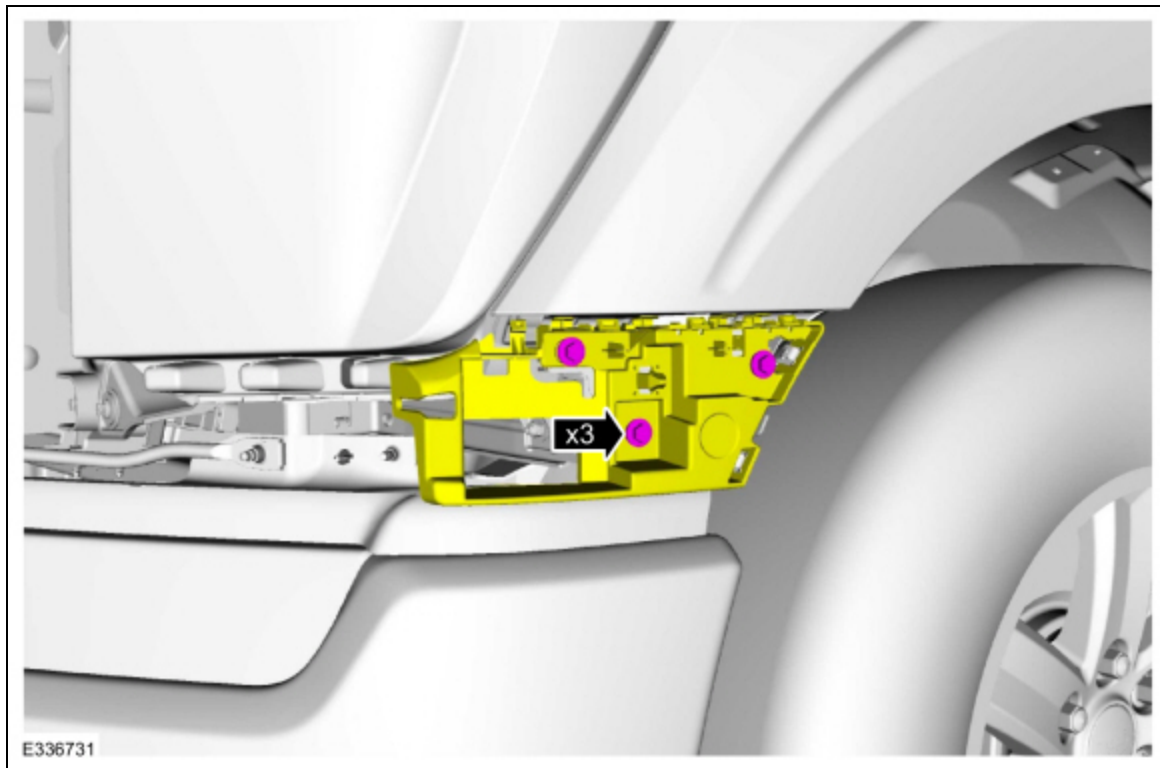


4.
 1. Remove the lower headlamp bolt.
Torque: 155 lb.in (17.5 Nm)
 2. Remove the lower headlamp nut.
 3. Pulling forward, position out the headlamp assembly.

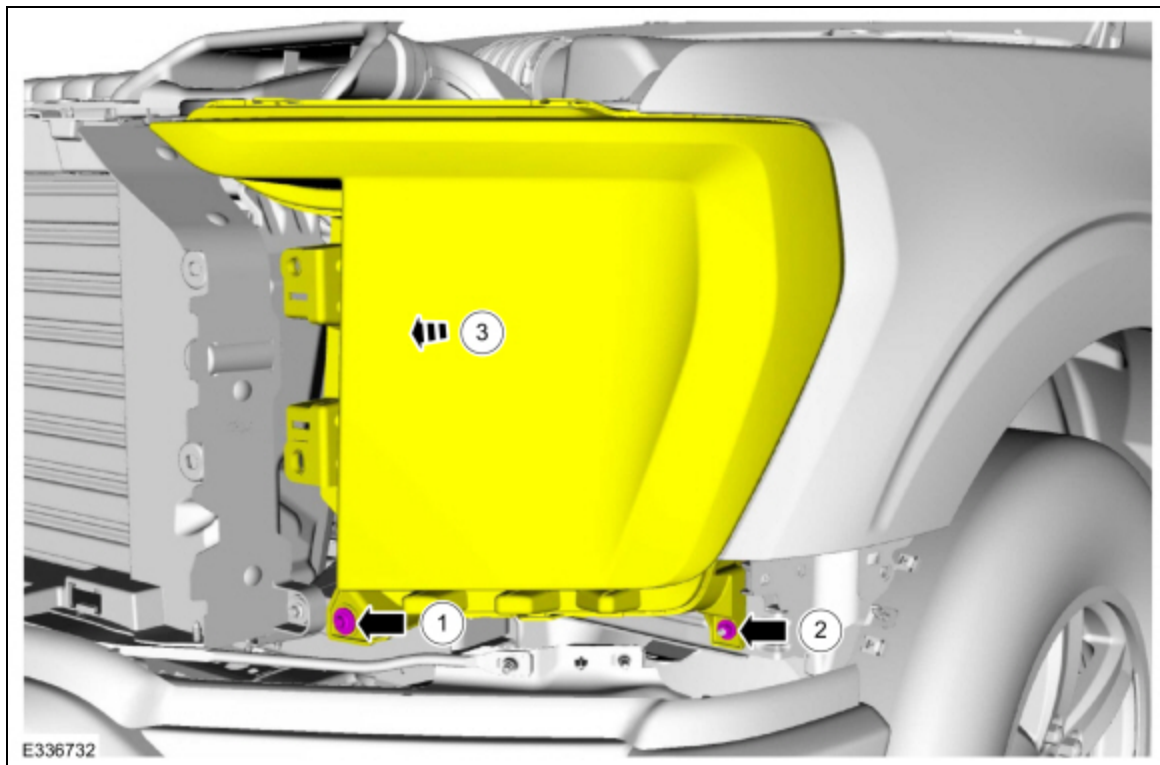


Vehicles with halogen headlamps

5. Disconnect the headlamp electrical connectors and remove the headlamp assembly.

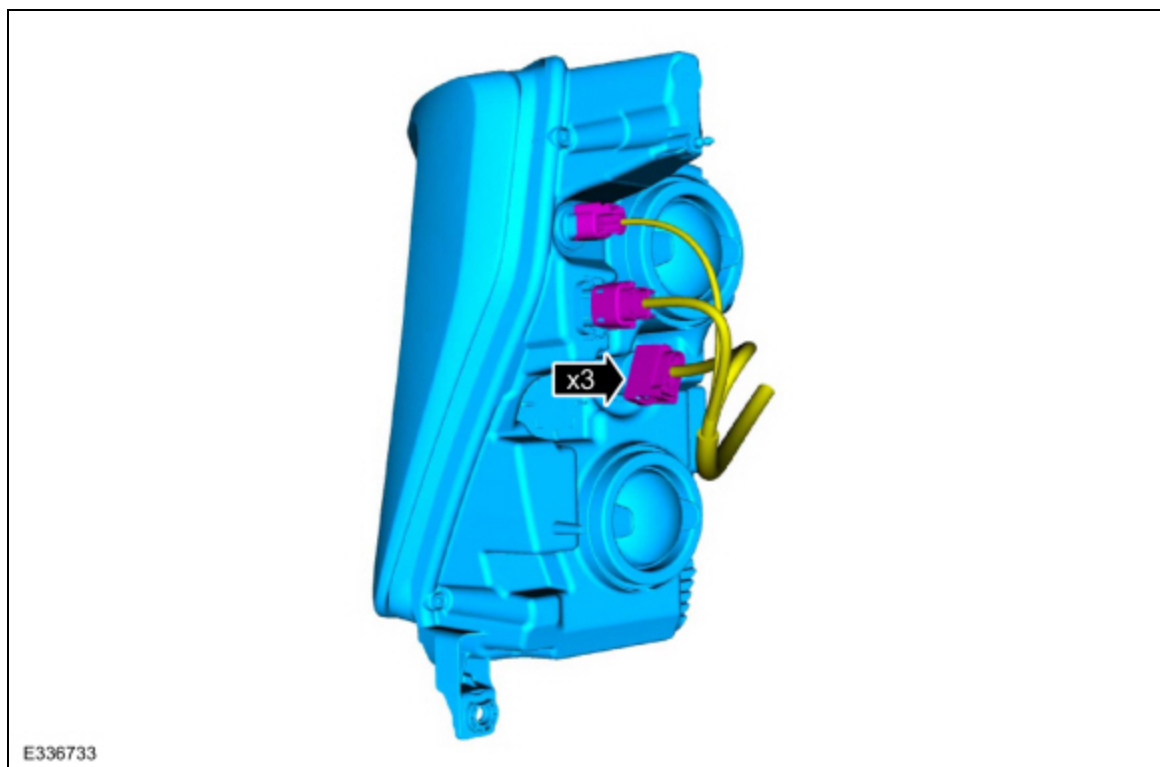

Vehicles with LED headlamps

6. Disconnect the electrical connector and remove the headlamp assembly.

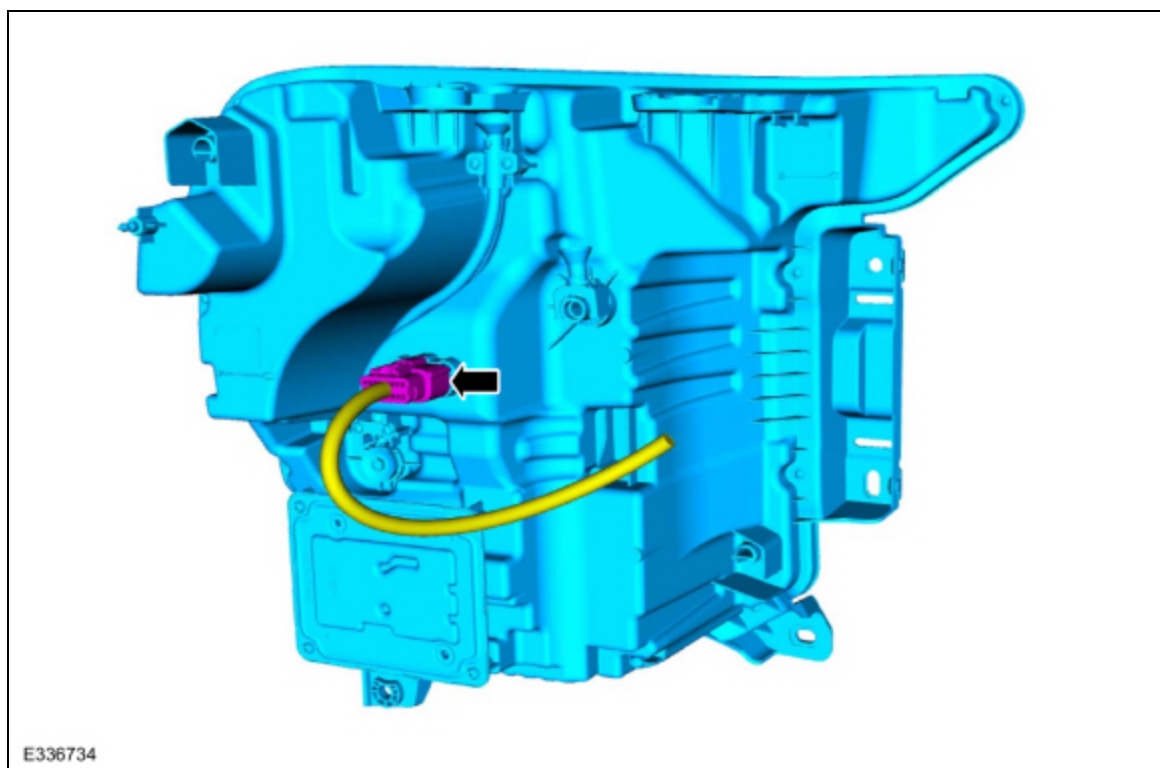

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** If a new headlamp assembly is installed, carry out this step when a light emitting diode (LED) control module has been transferred.

Using a diagnostic scan tool, execute the BCM LIN new module initialization procedure. Follow the diagnostic scan tool directions.

3. Adjust the headlamps.

Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

© Copyright 2025, Ford Motor Company.
