

Radiator Grille




Special Tool(s) / General Equipment

Flat Headed Screw Driver

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the push pin retainers, position aside the air intake duct, and remove the air deflector.

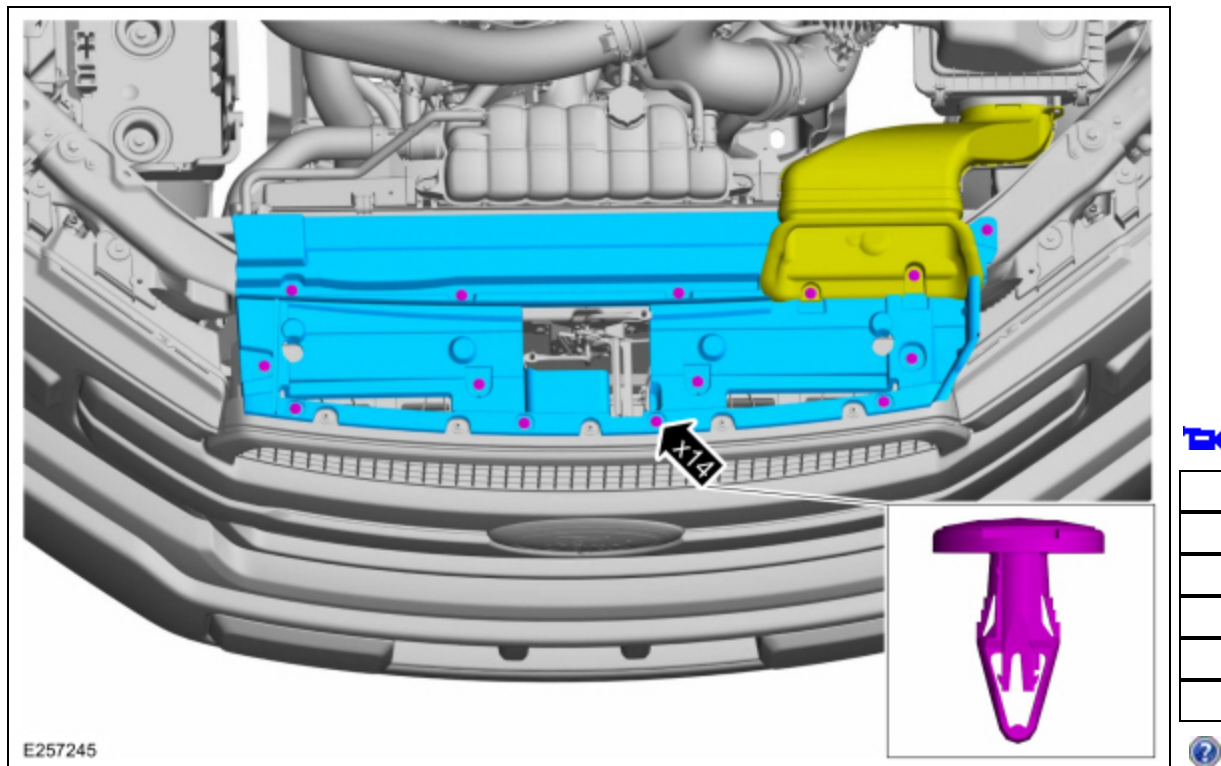


2. **NOTE:** If equipped.

Disconnect the electrical connectors and washer hose.

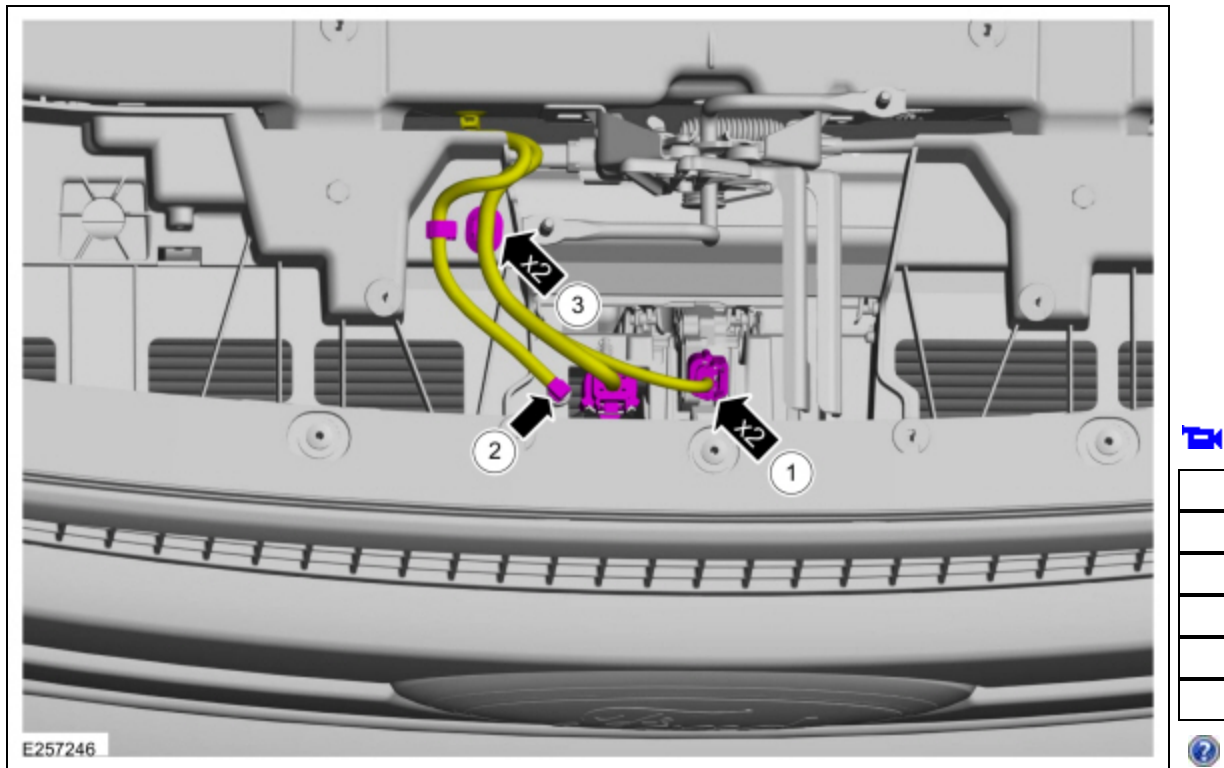


3. Raise the vehicle on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
4. On both sides.
Remove the 2 screws.
Torque: 15 lb.in (1.7 Nm)

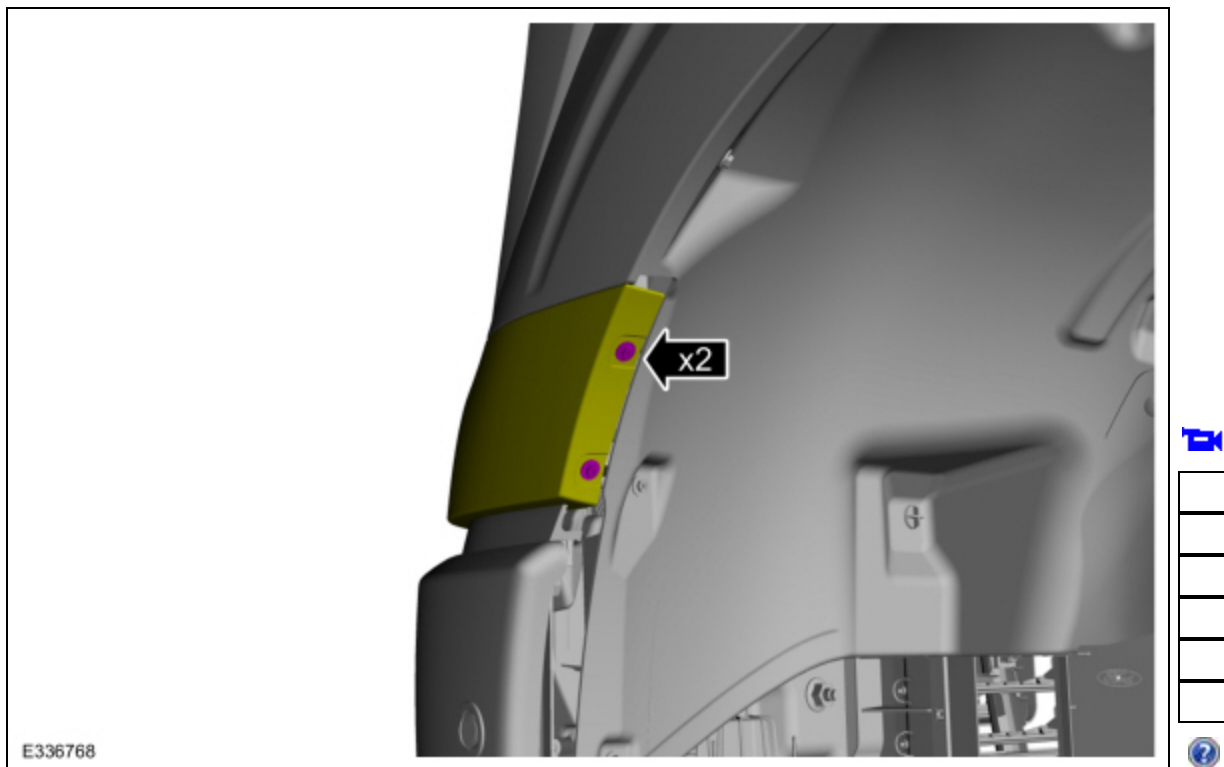


5. Remove the front bumper upper cover trim panel.


- Using a flat-blade screwdriver release the locking tabs
Use the General Equipment: Flat Headed Screw Driver

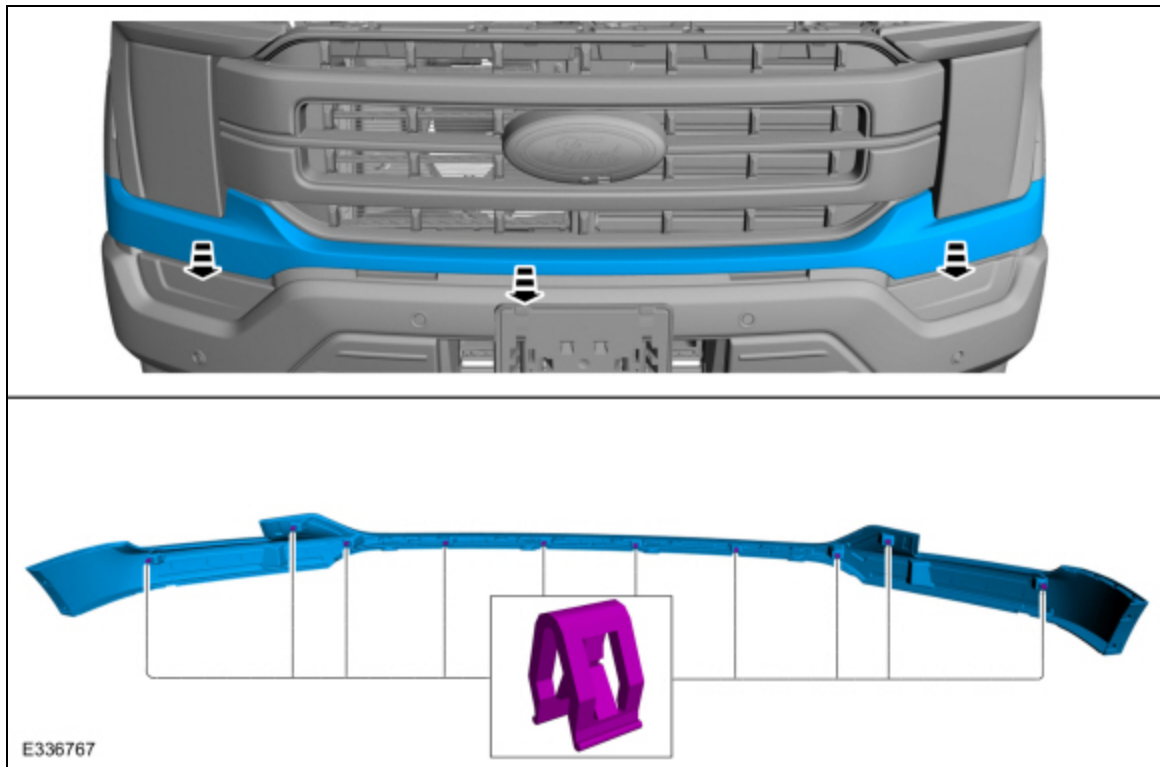

6. Remove the bolts and the pin-type retainer.
Torque: 36 lb.in (4.1 Nm)

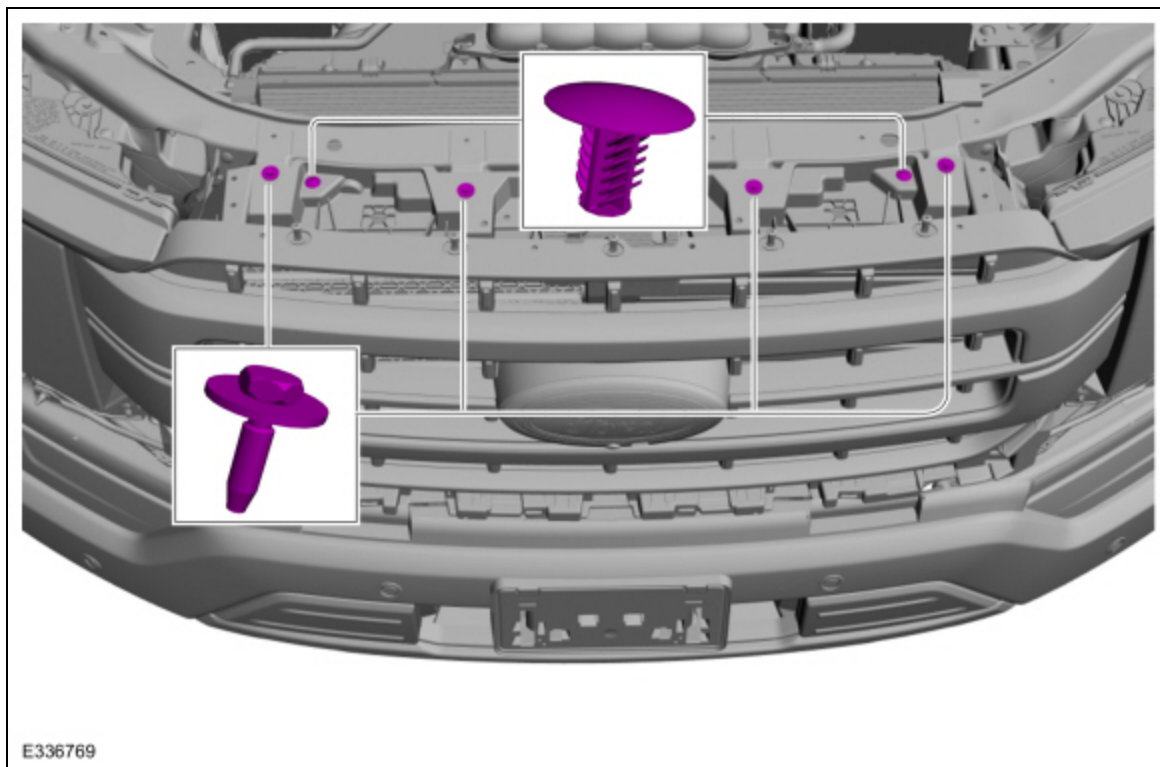


7. Remove the active grille shutter mounting bolts.
Torque: 159 lb.in (18 Nm)

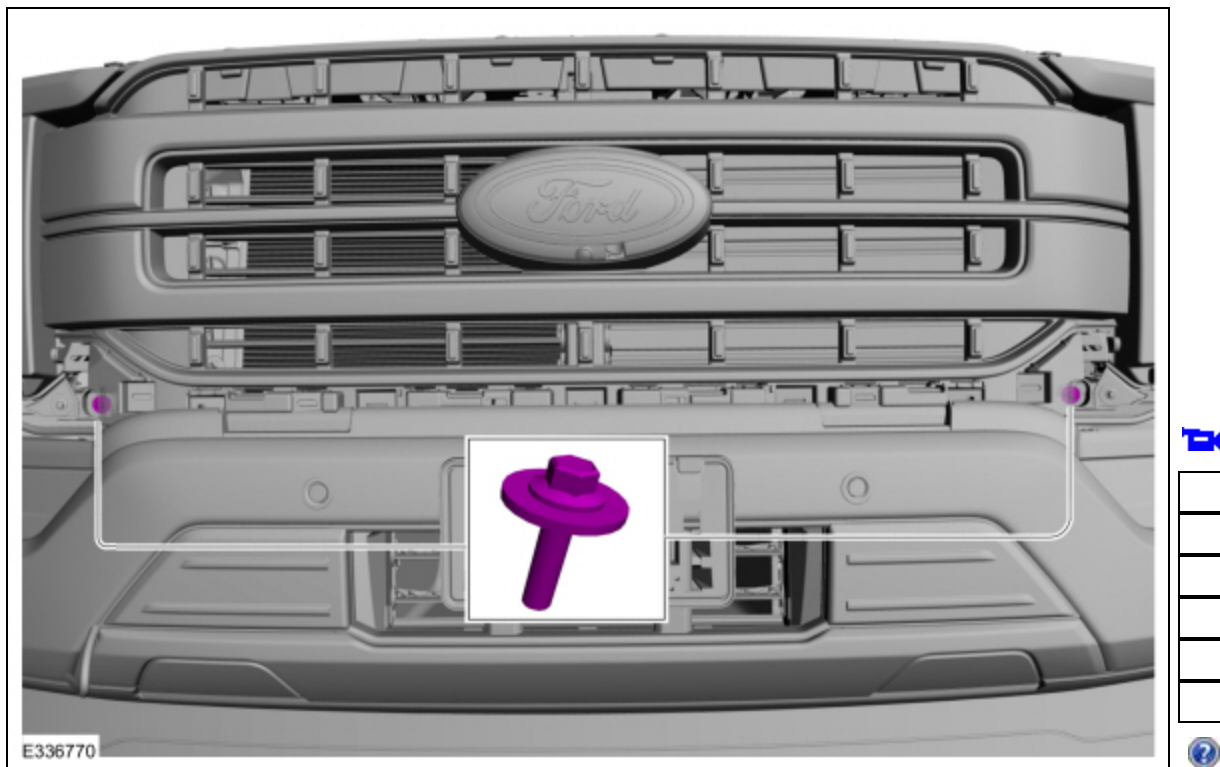

8.

- Remove the pin-type retainer.
- Pull up to disengage the locating pins along the top of the grille.
- Pull forward on center of the grill to remove.

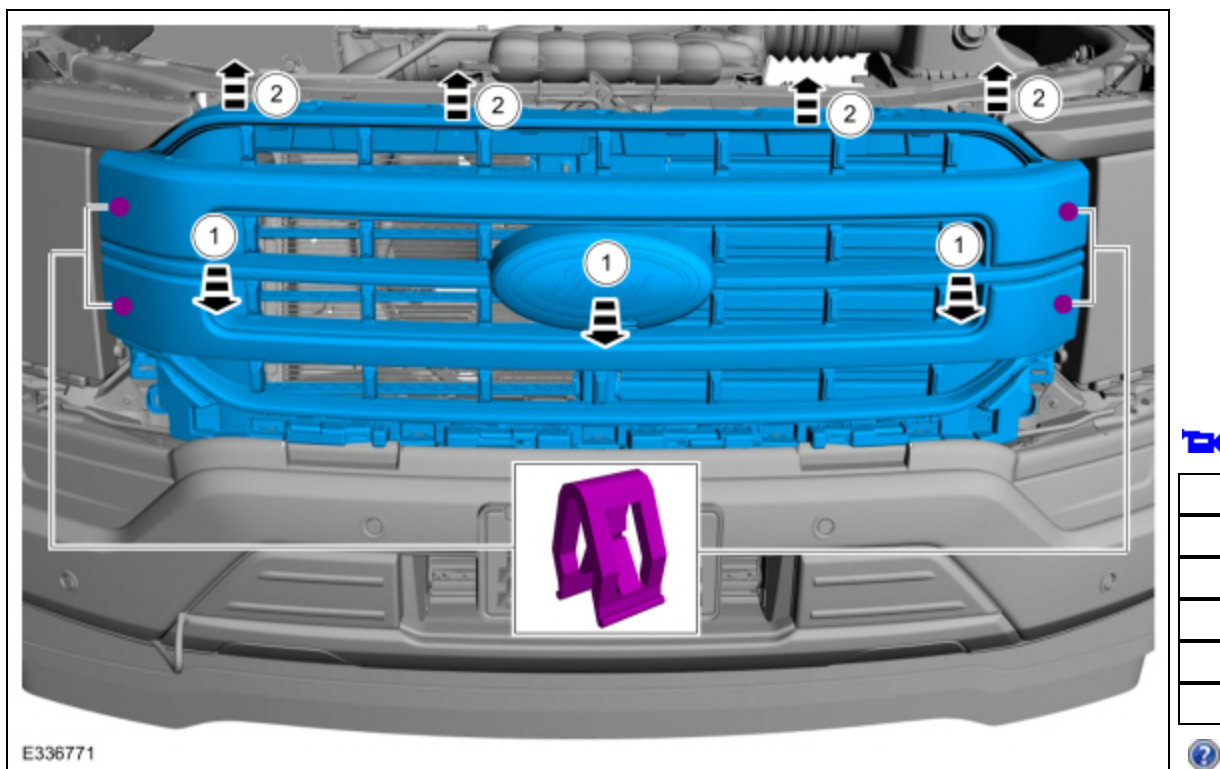

Installation

1. To install, reverse the removal procedure.
2. If the radiator grille is being replaced, Transfer parts as required.

Refer to: [Active Grille Shutter](#) (501-02 Front End Body Panels, Removal and Installation).

3. If equipped with front parking aid camera align the cameras.

Refer to: [360 Degree View Camera Alignment](#) (413-13B Parking Aid, General Procedures).

4. If installing a new front parking aid camera.

It is necessary to configure the new camera.

Refer to: [Front Parking Aid Camera - Flex Fuel – Ethanol/Full Hybrid Electric Vehicle \(FHEV\)/Gasoline](#) (413-13B Parking Aid, Removal and Installation).